

USER MANUAL



Observations and warranty

Please, read this user's manual carefully before installation to get the psu's best performance by optimized installation. Nox Xtreme is not responsable for any damage to the product or injury caused by incorrect installation or user's carelessness and the following:

- Wear and tear associated with normal use.
- Any modification, abuse, accident, disassmebly, misapplication, or unauthorized repair.
- Removal of any manufacturer labels or stikers.
- Any improper operation, including any use not in accordance with any supplied product instructions.
- · Connection to any improper voltage supply.
- . Any other cause wich does not relate to a product defect in materials or workmanship.

For your warranty claims, please contact the dealer where you purchased the product. The warranty is for 2 years from purchasing date (depending on the laws of each country). For questions, contact with Nox Xtreme in support@nox-xtreme.com

Technical data

- Dimensions: 150 x 140 x 86mm
- Net weight: 1.71Kg (650W) / 1.73Kg (750W) / 1.77Kg (850W)

Package contents

- Hummer 80 PLUS Gold power supply
- User manual
- · Mounting screws

Safety information

- · CAUTION ELECTRIC SHOCK HAZARD.
- Install in accordance with all manufacturer instructions and safety warnings. Failure to do so
 may result in damage to your power supply or system, and may cause serious injury or death.
- High voltages are present in the power supply. Do not open the power supply case or attempt to repair the power supply; there are no user-serviceable components.
- This product is designed for indoor use only.
- \bullet Do not use the power supply near water, or in high temperature or high humidity environments.
- . Do not insert any objects into the open ventilation or fan grill area of the power supply.
- Do not modify the cables and/or connectors included with this power supply.
- If this power supply uses modular cables, use only manufacturer supplied cables.
- Failure to comply with any manufacturer instructions and/or any of these safety instructions will immediately void all warranties and guarantees.

user manual



Installation

- · Removing your existing power supply.
- . Make sure the power supply's AC power cable is not connected.
- Install the power supply with the screws provided.
- The main 24-pin power cable has a detachable 4-pin mechanism in order to support either a 24-pin or a 20-pin socket on the motherboard.
- Connect the eight-pin (4+4) +12V (EPS12V) cable to the motherboard.
- · Connect the peripheral cables, PCI-Express cables, and SATA cables.
- Make sure all the cables are tightly connected.
- Connect the AC power cord of the power supply and turn it on by pushing the switch to the ON position

Hummer connections

HUMMER 80PLUS Gold 650W					
Quantity	Lenght	Connectors per cable	Cable		
1	450 mm	1	MB ATX 20+4 pin		
1	600 mm	1	CPU 4+4 pin		
1	350 + 100 + 100 + 100 mm	2/2	Molex 4 pin x 2		
1	350 + 100 + 100 + 100 mm	3/1	SATA x 3 + Molex		
2	450 + 150mm	2	PCIE 6+2 pin		
1	450 mm	1	PCE 5.1 12V-2x6 450w 12+4 pin		

HUMMER 80PLUS Gold 750W

Quantity	Lenght	Connectors per cable	Cable
1	450 mm	1	MB ATX 20+4 pin
1	600 mm	1	CPU 4+4 pin
1	350 + 100 + 100 + 100 mm	2/2	Molex 4 pin x 2
1	350 + 100 + 100 + 100 mm	3/1	SATA x 3 + Molex
2	450 + 150mm	2	PCIE 6+2 pin
1	450 mm	1	PCE 5.1 12V-2x6 450w 12+4 pin

HUMMER 80PLUS Gold 850W

Quantity	Lenght	Connectors per cable	Cable
1	450 mm	1	MB ATX 20+4 pin
1	600 mm	1	CPU 4+4 pin
1	350 + 100 + 100 + 100 mm	2/2	Molex 4 pin x 2
1	350 + 100 + 100 + 100 mm	3/1	SATA x 3 + Molex
2	450 + 150mm	2	PCIE 6+2 pin
1	450 mm	1	PCE 5.1 12V-2x6 600w 12+4 pin

Think BIG, Think

