



nox


HUMMER

M-LCD SERIES


USER MANUAL - MANUAL DE USUARIO

PARTS LIST / LISTA DE COMPONENTES


A

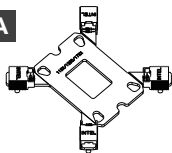

B

 


C

 


D



E

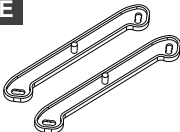

F

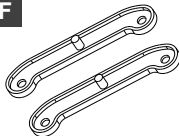

G

360×12
240×8



INTEL:

A

C

D

E



AMD:


C

D


F

RADIATOR INSTALLATION / INSTALACIÓN DEL RADIADOR

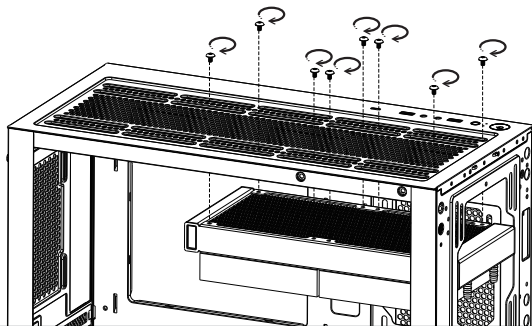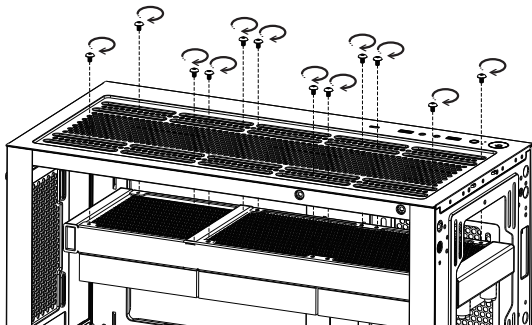


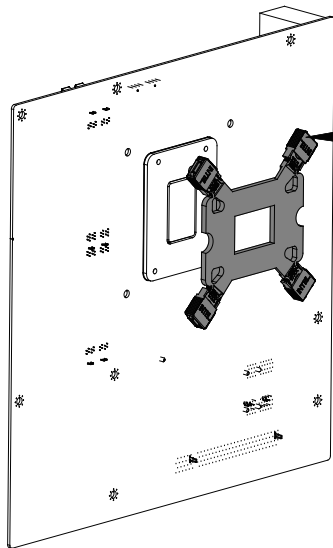

A

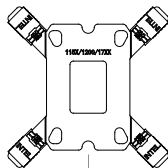




LGA1851/1700

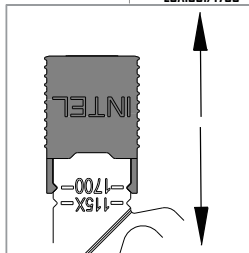


LGA115X/1200

INTEL


LGA 1851 - LGA 1700 - LGA 1200 - LGA 115X

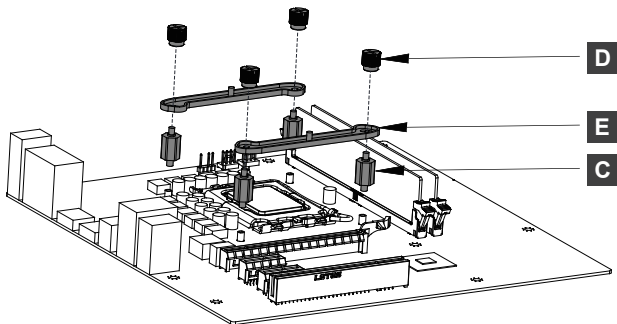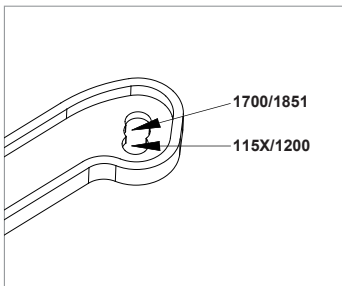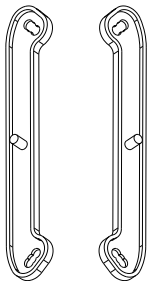



1

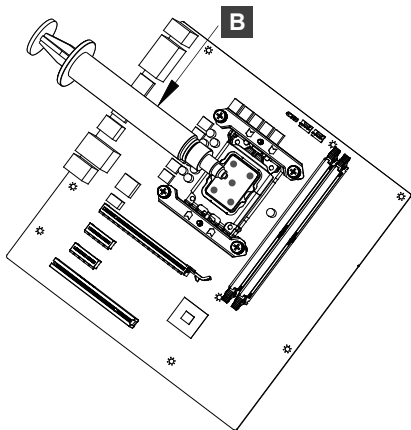


2

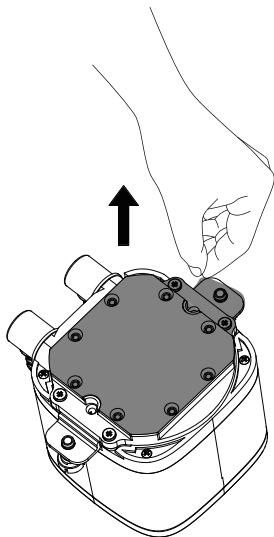

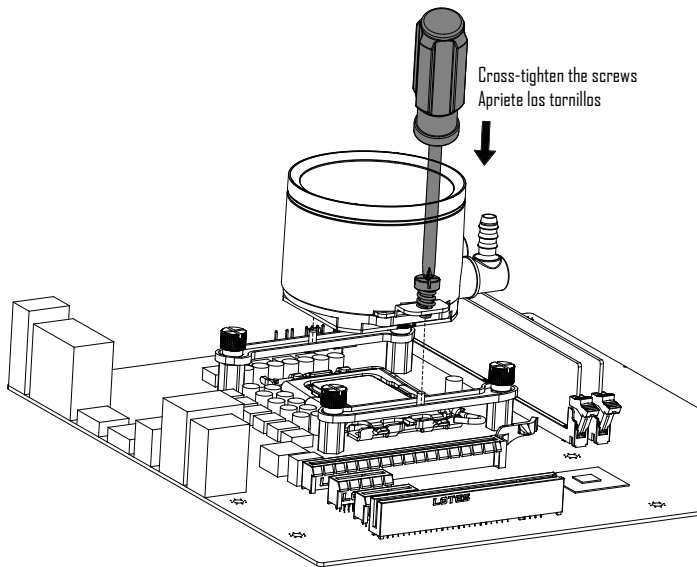


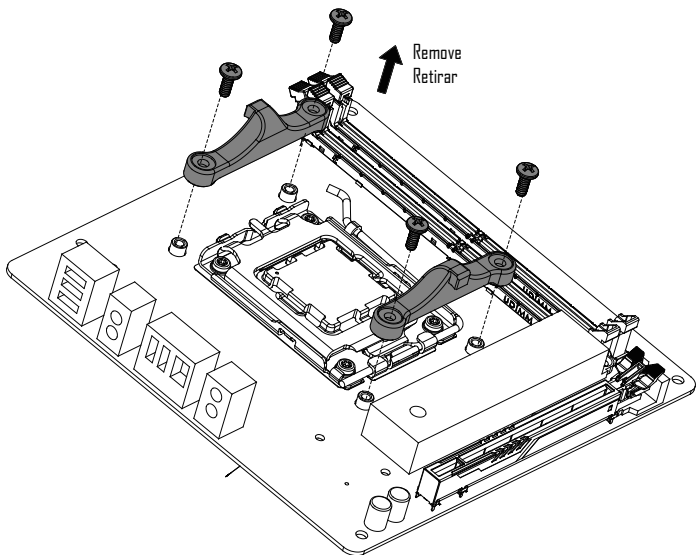

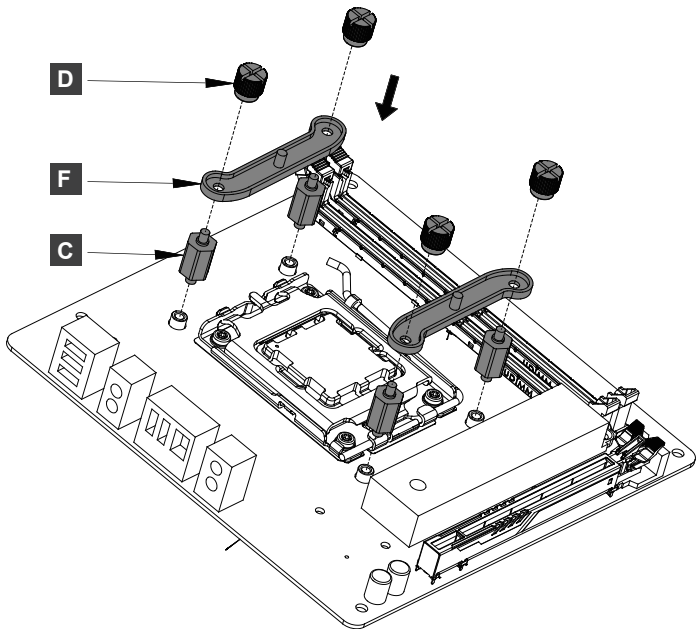



1

B

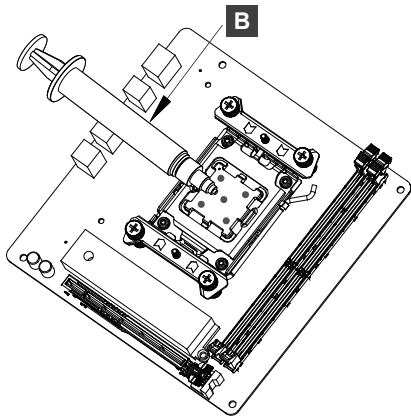


2


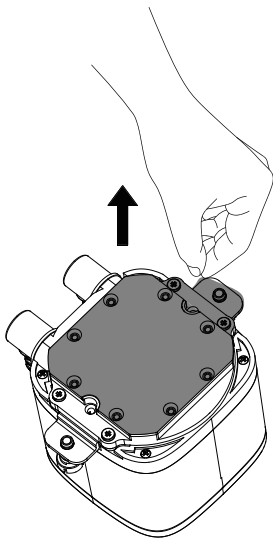


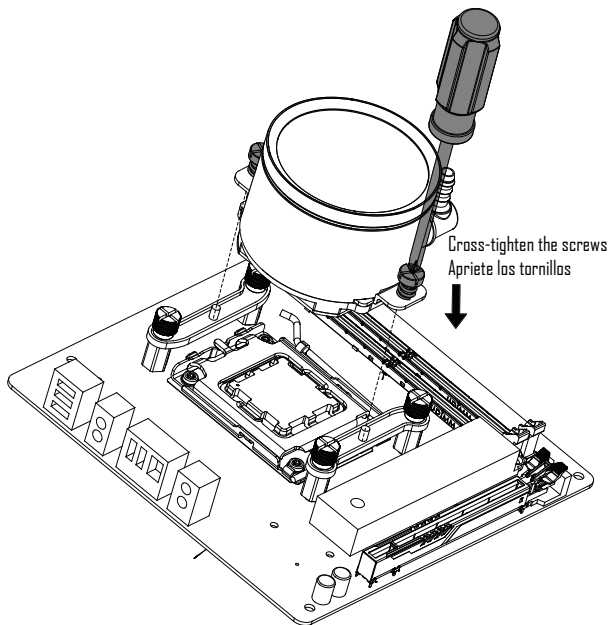



CONNECTIONS / CONEXIONES

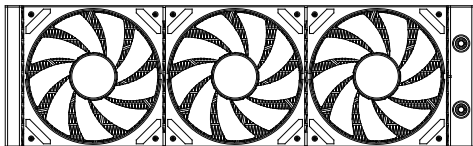

USB-9PIN
FOR LCD PANEL
PARA EL PANEL LCD

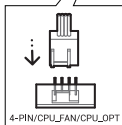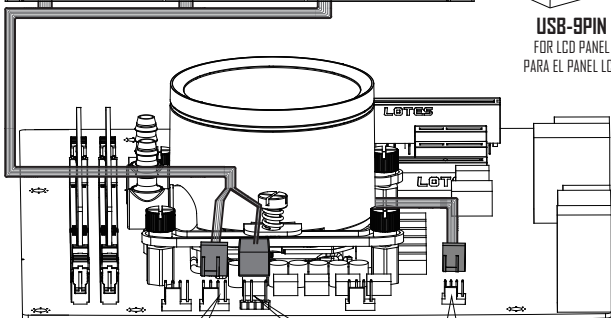

4-PIN/CPU_FAN/CPU_OPT

  

AIO_PUMP/W_PUMP
CPU_FAN/CPU_OPT